

## QUIET WRAP PIPE SOUNDPROOFING WRAP

**Description:** Quiet Wrap Pipe Soundproofing Wrap is specially designed mass loaded vinyl products bonded to high density acoustical foams designed to block and absorb the transmission of sound waves out of pipes. The Quiet Wrap Pipe Soundproofing Wrap does a great job at isolating sound from pipes by containing it very close to where it is created. Please read instructions thoroughly before starting installation and if at any time you have a question please do not hesitate to call **1-866-949-9269**.

**General Installation Tips:** The Quiet Wrap Pipe Soundproofing Wrap is a full peel and stick material make sure the pipe is free from dust, dirt, or oil. The Quiet Wrap is wrapped around the pipe in a spiral pattern, and typically you need to cover 100% of the pipe in question to reduce the sound transfer. The Quiet Wrap is installed with the foam facing the pipe and the barrier side facing out.

### Tools Required:



Razor Knife, tape measure, scissors, pencil

### Cutting:

1. Mark a line on the Quiet Wrap Pipe Soundproofing Wrap where you want to cut the material. You can either cut the material with a pair of scissors or a razor knife.
2. Most people will cut the Quiet Wrap while the material is being wrapped on the pipe.

### Installation Methods: PSA

1. Start at one end of the pipe you are looking to soundproof peel back the edge of the blue PSA backing to reveal 4-5" of the PSA back.
2. Holding the material at a slight angle press firmly against the top of the Quiet Wrap and ensure the PSA is sticking properly.

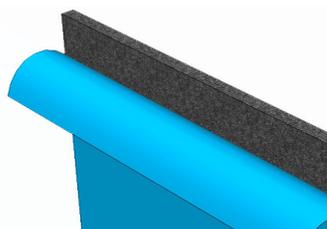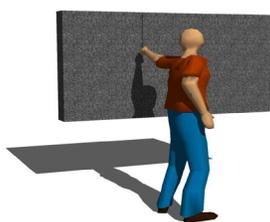

3. Work your way down the material peeling the backing and pressing firmly to ensure the PSA is sticking properly and wrapping the material at an angle.



### ADDRESS

Soundproofcow  
440 Ramsey Avenue  
Chambersburg, PA 17201

### PHONE

P: 1-866-949-9COW  
F: (717)261-1790

### WEB

[www.soundproofcow.com](http://www.soundproofcow.com)

4. As you work your way down the pipe the material may begin to bubble or wrinkle if it does simply cut the material and restart.
5. Continue the steps above for all remaining sections of pipe wrap or until the pipe is completely covered

---

**ADDRESS**

Soundproofcow  
440 Ramsey Avenue  
Chambersburg, PA 17201

**PHONE**

P: 1-866-949-9COW  
F: (717)261-1790

**WEB**

[www.soundproofcow.com](http://www.soundproofcow.com)