


BETTER New Wall Soundproofing Assembly

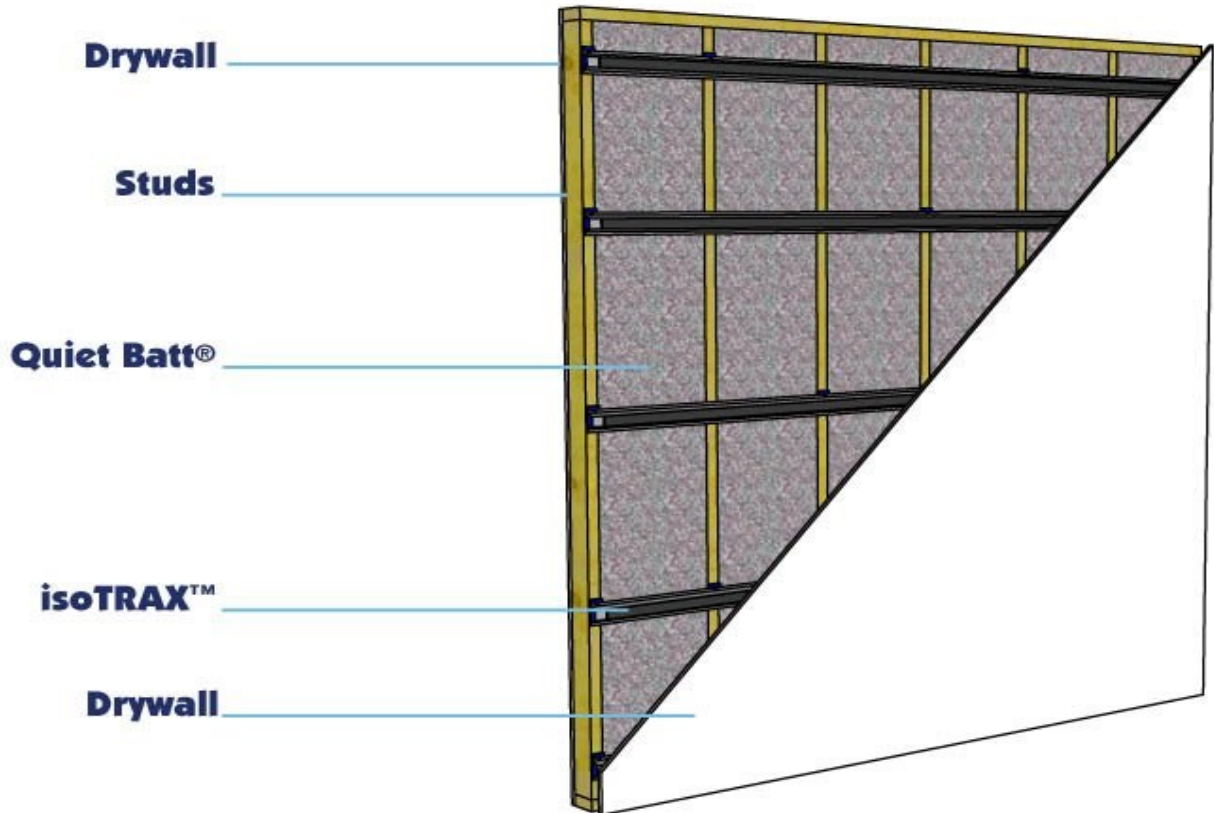

This assembly is perfect for shared walls in condominiums and apartments and a cost effective alternative to our best assembly. Use this assembly to reduce airborne and structural borne noise transfer between two rooms. This type of construction is a good solution for a variety of spaces from bedrooms to mechanical/machinery rooms.

ADDRESS

Soundproofcow
440 Ramsey Avenue
Chambersburg, PA 17201

PHONE

P: 1-866-9499-COW
F: (717) 261-1790

WEB

www.soundproofcow.com



Products used in this assembly:

[isoTRAX™ Soundproofing System](#)



[Quiet Batt® Soundproofing Insulation](#)



[OSI® Pro-Series® SC-175™ Acoustical Sound Sealant](#)



ADDRESS


Soundproofcow
440 Ramsey Avenue
Chambersburg, PA 17201

PHONE

P: 1-866-9499-COW
F: (717) 261-1790

WEB

www.soundproofcow.com

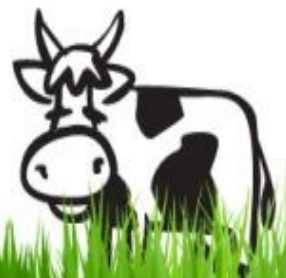

Instructions / Details

1. Install the Quiet Batt® between the studs.
2. Install the isoTRAX™ Soundproofing System on to the studs with provided hardware.
3. Install 5/8 inch Type X gypsum board on to the isoTRAX™ system with 1 ¼ inch fine thread drywall screws. Screws should be placed 12 inches apart. Leave a ¼ inch gap between the new layer of gypsum board and all adjoining wall, ceiling and floor surfaces.
4. Fill the ¼ inch gap with OSI® Pro-Series® SC-175™ Acoustical Sound Sealant.
5. Finish the gypsum board using common industry standards.

Note: For increased performance add another layer of 5/8 inch Type X Gypsum board.

ADDRESS

Soundproofcow
440 Ramsey Avenue
Chambersburg, PA 17201

PHONE

P: 1-866-9499-COW
F: (717) 261-1790

WEB

www.soundproofcow.com

