


BEST Laminate Floor Soundproofing Assembly

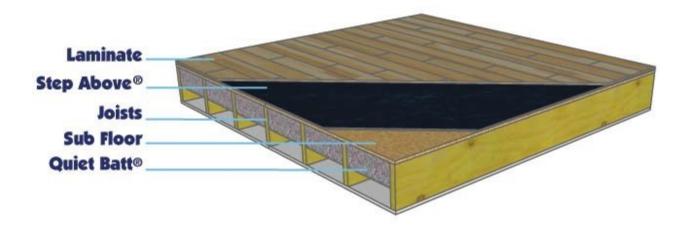

This is the best assembly for improving the soundproofing performance of Laminate floors. Use this assembly to reduce impact noise (foot fall) and airborne noise transfer between two rooms with an adjoining floor/ceiling. The Step Above[®] product in this assembly will also make the laminate floors sound more like hardwood. This type of construction is perfect for floors in multifamily dwellings such as condominiums and apartment buildings.

ADDRESS

Soundproofcow 440 Ramsey Avenue Chambersburg, PA 17201 PHONE P: 1-866-9499-COW F: (717) 261-1790

www.soundproofcow.com

WEB



Products used in this assembly:



ADDRESS

Soundproofcow 440 Ramsey Avenue Chambersburg, PA 17201 PHONE

P: 1-866-9499-COW F: (717) 261-1790 WEB

www.soundproofcow.com





Instructions / Details

1. Apply the Acoustic Sealant around the entire perimeter of the room. Seal all cracks and holes.

2. Make sure the sub-floor surface is clean, dry and free of obstructions.

 Start in a corner. Unroll the Step Above® flooring underlayment over the sub-floor with the vapor barrier film side down. Be sure the tape side is next to the wall and the overlapping lip is toward the open room.

4. Roll out the next row in the same manner. Butt the underlayment close to the first row. Be sure to overlap the vapor barrier lip and not the underlayment material.

5. Remove the tape liner from the bottom of the underlayment and secure it to the vapor barrier lip of the adjoining piece. Seal all open seams with an aggressive adhesive plastic tape.

6. Install the flooring per manufacturers instruction

Note: For increased performance add Quiet Batt® Soundproofing Insulation between the floor joists.

ADDRESS

Soundproofcow 440 Ramsey Avenue Chambersburg, PA 17201 PHONE

P: 1-866-9499-COW F: (717) 261-1790 www.soundproofcow.com

WEB

