


BEST New Ceiling Soundproofing Assembly

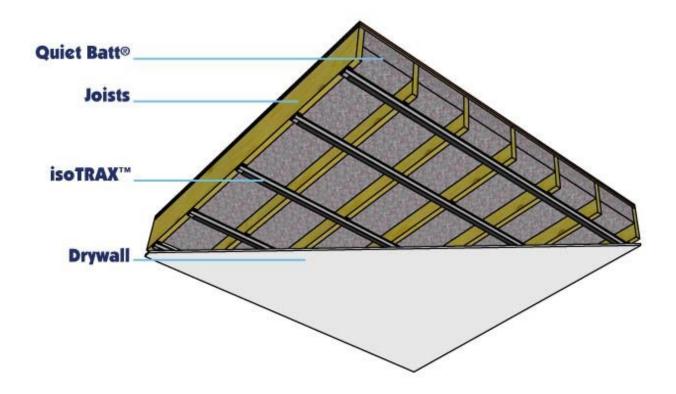

This assembly is perfect for ceilings in condominiums and apartments. Use this assembly to reduce airborne and structural borne noise transferred between two rooms separated by a ceiling/floor assembly. This type of construction is a good solution for a variety of spaces from bedrooms to mechanical/machinery rooms.

ADDRESS

Soundproofcow 440 Ramsey Avenue Chambersburg, PA 17201 PHONE P: 1-866-9499-COW F: (717) 261-1790 WEB www.soundproofcow.com



Products used in this assembly:



ADDRESS

Soundproofcow 440 Ramsey Avenue Chambersburg, PA 17201 PHONE

P: 1-866-9499-COW F: (717) 261-1790 WEB

www.soundproofcow.com





Instructions / Details

1. Install the Quiet Batt® between the joists.

2. Install the isoTRAX™ Soundproofing System onto the ceiling joists.

3. Install ½ inch Type X gypsum board on to the isoTRAX™ system with 1 ¼ inch fine thread drywall screws. Screws should be placed 8 inches apart. Leave a ¼ inch gap between the new layer of gypsum board and all adjoining walls.

4. Fill the ¼ inch gap with OSI® Pro-Series® SC-175™ Acoustical Sound Sealant.

5. Finish the gypsum board using common industry standards.

Note: For increased performance add another layer of 5/8 inch Type X Gypsum board.

ADDRESS

Soundproofcow 440 Ramsey Avenue Chambersburg, PA 17201 PHONE

P: 1-866-9499-COW F: (717) 261-1790 www.soundproofcow.com

WEB

